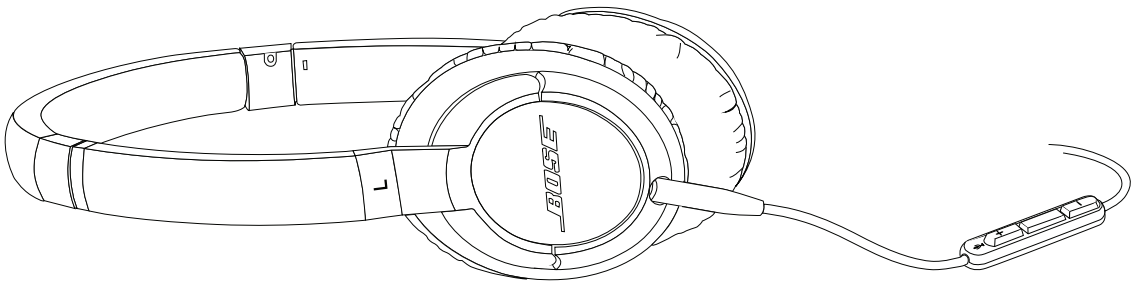

Bose® SoundTrue™

ON-EAR HEADPHONES

Owner's Guide | Guía del usuario | Notice d'utilisation

Safety

Please read this owner's guide carefully and save it for future reference.

WARNINGS:

- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.
- Sounds that you rely on as reminders or warnings may have an unfamiliar character when using headphones. Be aware of how these sounds may vary in character so you can recognize them as needed.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- This product contains magnetic material. Please contact your physician if you have any questions on whether this might affect the operation of your implantable medical device.

- DO NOT use mobile phone adapters to connect headphones to airplane seat jacks as this could result in personal injury such as burns or property damage due to overheating. Remove and disconnect immediately if you experience warming sensation or loss of audio.
- Do not submerge or expose for extended period to water or wear while participating in water sports, i.e. swimming, waterskiing, surfing, etc.

CAUTIONS:

- Do not drop, sit on or allow the headphones to be immersed in water.
- Be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.

CE This product conforms to all applicable EU directive requirements. The complete declaration of conformity can be found at www.Bose.com/compliance

Limited Warranty

Your Bose® headphones are covered by a limited warranty. Details of the limited warranty are provided on the product registration card that is included in the carton. Please refer to the card for instructions on how to register. Failure to register will not affect your limited warranty rights.

© 2014 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Names and Contents of Toxic or Hazardous Substances or Elements						
	Toxic or Hazardous Substances and Elements					
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	O	O	O	O	O
Metal parts	X	O	O	O	O	O
Plastic parts	O	O	O	O	O	O
Speakers	X	O	O	O	O	O
Cables	X	O	O	O	O	O
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T 11363-2006.						

iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

“Made for iPod,” “Made for iPhone,” and “Made for iPad” mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

Contents

Welcome....5
Components....5
Wearing the headphones....6
Connecting to your iPhone, iPod, or iPad....6
Using the headphones with your iPhone, iPod, or iPad....6
For use with....6
Headphone controls....6
Basic functions....7
Media playback functions....7
Folding earcups....8
Storing the headphones....8
Replacing earcup cushions....9
Troubleshooting....10
Cleaning the headphones....10
Replacement parts and accessories....10

Welcome

Thank you for purchasing the Bose® SoundTrue™ on-ear headphones. Enjoy your music with smooth, full range sound, a comfortable on-ear fit and a contoured design that folds up for easy portability. An inline remote and microphone provide convenient control of select iPhone, iPod and iPad models.

Components

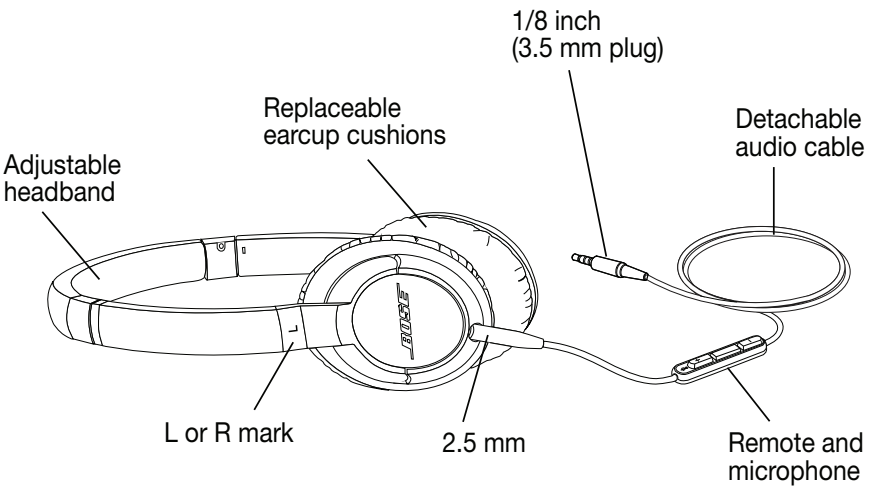

Using the headphones

Wearing the headphones

Put on the headphones using the markings which identify the left (L) and right (R) earcups. Adjust the headband so it rests gently on top of your head and the earcup cushions fit comfortably around your ears.

Connecting to your iPhone, iPod, or iPad

Connect the smaller (2.5 mm) plug securely to the left earcup. Connect the other plug securely to the audio output jack of the iPhone, iPod or iPad. You should hear or feel a click when you make these connections.

Using the headphones with your iPhone, iPod, or iPad

The headphones have a small in-line remote with an integrated microphone for convenient control of select iPhone, iPod, and iPad models.

For use with

The remote and mic are supported only by iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (120GB, 160GB), and iPod nano (4th generation or later). The remote is supported by iPod shuffle (3rd generation or later). Audio is supported by all iPad and iPod models.

Note: Full controls may not be available for some iPhone, iPod, or iPad models.

Note: For information on using your headphones with non Apple devices, refer to http://global.Bose.com

Headphone controls

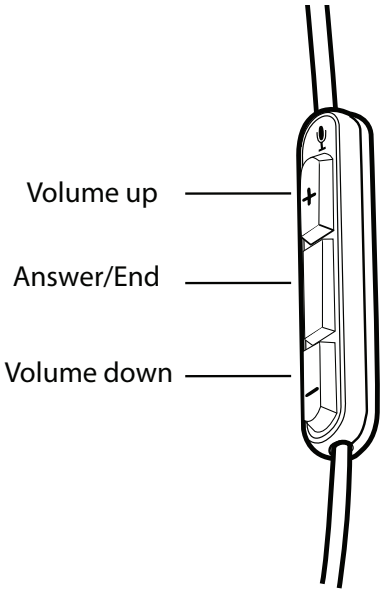

Basic functions

Increase volume	Press and release the + button.
Decrease volume	Press and release the – button.
Answer a call	When you receive an incoming call, press and release the Answer/End button to answer.
End a call	Press and release the Answer/End button.
Decline an incoming call	Press and hold the Answer/End button for about two seconds, then release.
Switch to an incoming or on-hold call and put the current call on hold	While on a call, press and release the Answer/End button once. Press and release again to switch back to the first call.
Switch to an incoming or on-hold call and end the current call	While on a call, press and hold the Answer/End button for about two seconds, then release.
Use Voice Control	Press and hold the Answer/End button. *See iPhone User Guide for compatibility and usage information about this feature.*

Media playback functions

Play or pause a song or video	Press and release the Answer/End button.
Skip to the next song or chapter	Press and release the Answer/End button twice quickly.
Fast forward	Press and release the Answer/End button twice quickly and hold the second press.
Go to the previous song or chapter	Press and release the Answer/End button three times quickly.
Rewind	Press and release the Answer/End button three times quickly and hold the third press.

Using the headphones

Folding earcups

The Bose® SoundTrue™ on-ear headphones feature rotating earcups that fold flat for easy, convenient storage. The earcups rotate in only one direction. Incorrectly rotating the earcups can damage the headphones.

Storing the headphones

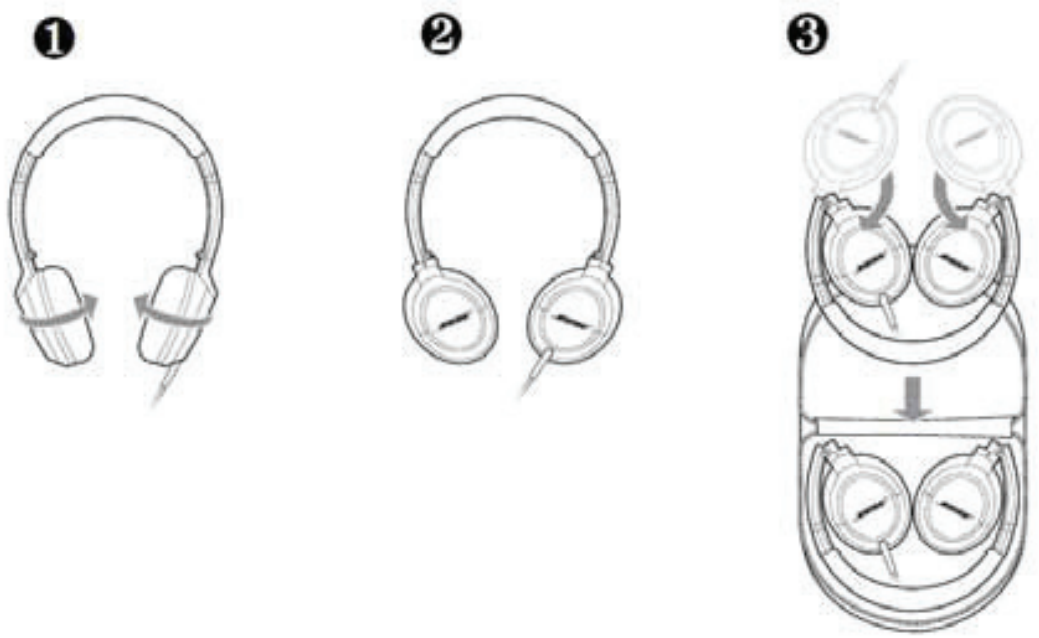

Note: Do not try to exceed the limits of the pivots or over-rotate the ear-cups.

Replacing earcup cushions

Remove earcup cushion:

1. Grasp the earcup cushion securely.
2. Pull up and out to remove the earcup cushion.

Re-attach earcup cushion:

1. Place the edge of the earcup cushion skirt into the slot behind the earcup flange.
2. Work the remainder of the skirt into the slot all the way around the earcup.

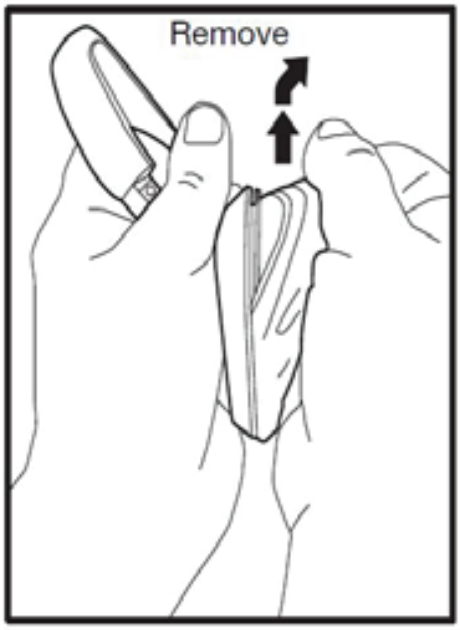

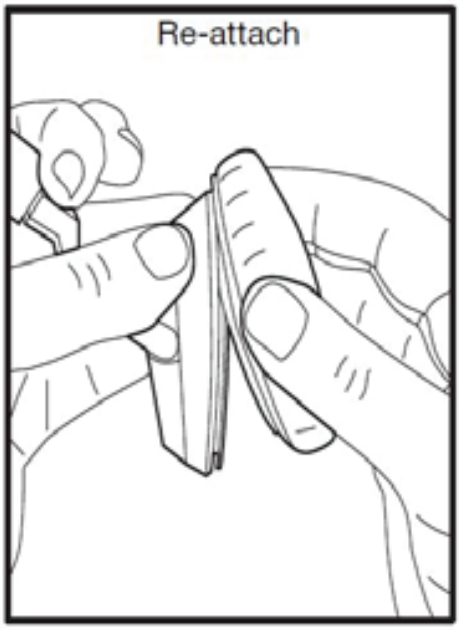

Using the headphones

Troubleshooting

If you experience any trouble using your headphones, try the following troubleshooting instructions. If you still need help, contact Bose Customer Service.

Problem	What to do
No audio or audio in one earcup only	• Make sure both ends of the audio cable are firmly connected. • Try another audio device.
Distorted bass	• Make sure both ear cushions are firmly secured.
Mis-shaped cushion	• The high-density earcup foam will regain its shape after a few minutes in a neutral position.
Microphone is not picking up sound	• Make sure that the headphone plug is securely connected to the headphone jack. • Make sure the microphone is not being blocked or covered. *The microphone is located on the back of the Answer/End button. (You may notice the small opening for the microphone.)*
Phone not responding to button presses	• Make sure that the headphone plug is securely connected to the headphone jack. • For multi-press functions: Vary speed of presses.
iPhone, iPod, or iPad not responding to remote	• Full controls may not be available for some iPhone, iPod, and iPad models .

Cleaning the headphones

The headphones do not require scheduled cleaning. Should cleaning be necessary, simply wipe the outside surfaces with a soft cloth. Be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.

Replacement parts and accessories

Accessories or replacement parts can be ordered through Bose Customer Service at http://global.Bose.com

BOSE®

Better sound through research®

©2014 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM714524 Rev. 00

BOSE® SOUNDTRUE™

ON-EAR HEADPHONES

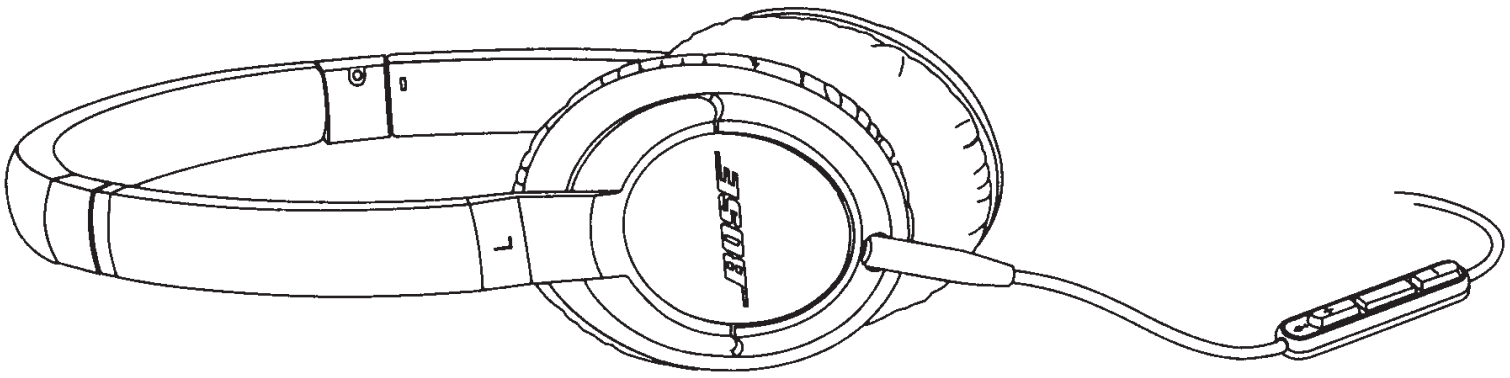

http://global.Bose.com

U.S. only:

http://Owners.Bose.com/soundtrue_oe

629551-0010

Please read this quick start guide carefully and save it for future reference.

For additional information about your headphones, refer to the Owner's Guide: http://global.Bose.com

U.S. only:
http://Owners.Bose.com/soundtrue_oe

Important Safety Instructions

WARNINGS

- Long-term exposure to loud music may cause hearing damage. It is best to avoid extreme volume when using headphones, especially for extended periods.
- Sounds that you rely on as reminders or warnings may have an unfamiliar character when using headphones. Be aware of how these sounds may vary in character so you can recognize them as needed.
- Do not place any naked flame sources, such as lighted candles, on or near the apparatus.
- This product contains magnetic material. Please contact your physician if you have any questions on whether this might affect the operation of your implantable medical device.

- DO NOT use mobile phone adapters to connect headphones to airplane seat jacks as this could result in personal injury such as burns or property damage due to overheating. Remove and disconnect immediately if you experience warming sensation or loss of audio.
- Do not submerge or expose for extended period to water or wear while participating in water sports, i.e. swimming, waterskiing, surfing, etc.
- Do not drop, sit on or allow the headphones to be immersed in water.
- Be sure the earcup ports are kept clear, and that no moisture is allowed to get inside the earcup.

CE This product conforms to all applicable EU directive requirements. The complete declaration of conformity can be found at www.Bose.com/compliance

CLEANING

Should cleaning be necessary, wipe the outside surfaces with a soft cloth.

Components

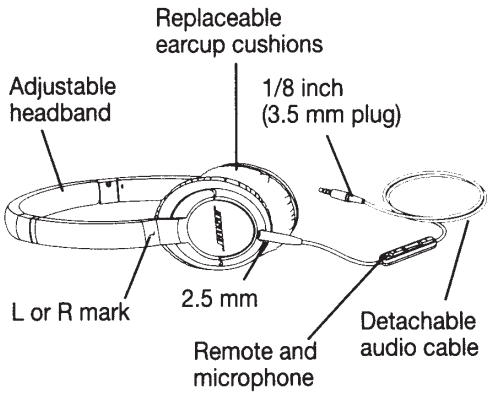

Connecting your iPhone, iPod or iPad

Connect the smaller (2.5 mm) plug securely to the left earcup. Connect the other plug securely to the audio output jack of the iPhone, iPod, or iPad. You should hear or feel a click when you make these connections.

Using the headphones with your iPhone, iPod or iPad

The headphones have a small in-line remote with an integrated microphone for convenient control of select iPhone, iPod, and iPad models.

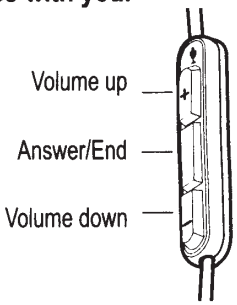

Note: Full controls may not be available for some iPhone, iPod, or iPad models.

Note: For information on using your headphones with non Apple devices, refer to http://global.Bose.com

Basic functions	
Increase volume	Press and release the + button.
Decrease volume	Press and release the – button.
Call-related functions	
Answer a call	When you receive an incoming call, press and release the Answer/End button to answer.
End a call	Press and release the Answer/ End button.
Use Voice Control	Press and hold the Answer/End button. See iPhone User Guide for compatibility and usage information about this feature.
Media playback functions	
Play or pause a song or video	Press and release the Answer/ End button.
Skip to the next song or chapter	Press and release the Answer/ End button twice quickly.
Fast-forward	Press and release the Answer/ End button twice quickly and hold the second press.
Go to the previous song or chapter	Press and release the Answer/ End button three times quickly.
Rewind	Press and release the Answer/ End button three times quickly and hold the third press.

Re-attaching earcup cushions

If an earcup cushion becomes detached:

1. Properly align the replacement cushion with the earcup.
2. Tuck an edge of the ear cushion skirt into the slot behind the ear cushion flange. Be careful not to fold the skirt over.
3. Work the remainder of the skirt into the slot all the way around the earcup.
4. Grasp the ear cushion and adjust its position to remove any folds in the skirt and wrinkles in the cushion.

Storing your headphones

The headphones feature rotating earcups that fold flat for easy, convenient storage.

Note: Do not try to exceed the limits of the pivots or over-rotate the earcups.

Troubleshooting

Poor Sound Quality or Missing Audio Channel(s)

- Make sure the headphone cable is securely plugged into both the headset and headphone jack of the iPhone, iPod or iPad.
- Adjust the bass and treble settings in the audio device.
- Try another audio device.

Microphone not working

- Make sure you are using a compatible iPhone, iPod or iPad (see list of compatible devices below).
- Make sure the headphones are securely plugged into the headphone jack of the iPhone, iPod or iPad.
- Make sure the microphone opening on the back of the Answer/End button is not blocked.
- Try another phone call.
- Try another iPhone, iPod or iPad.

iPhone, iPod or iPad is not responding to (remote) button commands

- Make sure you are using a compatible iPhone, iPod or iPad (see list of compatible devices below).
- Make sure the headphones are securely plugged into the headphone jack of the iPhone, iPod or iPad.
- For multi-press functions: vary speed of button presses.
- Try another iPhone, iPod or iPad.

For use with:

The remote and mic are supported only by iPhone 3GS or later, iPad, iPod touch (2nd generation or later), iPod classic (120GB, 160GB), and iPod nano (4th generation or later). The remote is supported by iPod shuffle (3rd generation or later). Audio is supported by all iPad and iPod models.

iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone or iPad may affect wireless performance.

©2014 Bose Corporation. No part of this work may be reproduced, modified, distributed, or otherwise used without prior written permission.

Please refer to the complete Owner's Guide, available online, for more information about your headphones, including advanced functions, additional troubleshooting suggestions and information on accessories and replacement parts. To request a printed copy of the complete Owner's Guide, please refer to the phone numbers provided for your region.

The serial number is located on the warranty card included in the carton.

Now is a good time to register your headphones. You can do this easily by going to http://global.Bose.com/register

United States	888 757 9943
Australia	1800 061 046
Austria	01 60404340
Belgium	012 390 800
Canada	800 905 2177
China	86 400 880 2266
Denmark	4343 7777
Europe, Other	+31(0) 299390111
Finland	+358 10 778 6900
France	01 30 61 67 39
Germany	0 6172 71040
Greece	2106744575
Hong Kong	852 2123 9000
Hungary	6040434 31
India	1800-102-2673
Ireland	1-800-932-436
Italy	800 832 277
Japan	0570 080 021
Latin Markets, Other	508 614 6000
Mexico	001 866 693 2673
New Zealand	0800 501 511
Norway	+47 62 82 75 00
Portugal	229419248
Spain	917482960
Sweden	+46 774 - 450 450
Switzerland	061 975 77 33
Taiwan	886 2 2514 7977
The Netherlands	0299 390290
United Arab Emirates	+971 4 417 2000
United Kingdom	0800 081 3569

Made for
iPod iPhone iPad

Better sound through research®

©2014 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM629551 Rev. 01

The warranty information provided with this product does not apply in Australia and New Zealand.
See our website at
www.bose.com.au/warranty
or
www.bose.co.nz/warranty
for details of the Australia and New Zealand warranty.

Warranty information inside
Register your product now

Contiene información sobre la garantía
Registre su producto ahora

Renseignements sur la garantie à l'intérieur
Enregistrez votre produit dès maintenant

Registre su producto.* Conozca toda la gama de servicios que su garantía le ofrece.

Registrarse en línea es fácil y rápido. Global.Bose.com/register

Enlace directo para registrarse:

www.register.Bose.eu *(Europa)*
www.Bose.com/register *(EE.UU., Puerto Rico e Islas Vírgenes de EE.UU.)*
www.Bose.com.au/warranty *(Australia)*
www.Bose.ca/register *(Canadá)*
www.Bose.co.nz/warranty *(Nueva Zelanda)*

Envíe cualquier correspondencia en relación con información de productos o los servicios de la Garantía limitada a la sede corporativa de la empresa en:

Registro del producto
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 EE.UU.

1-800-736-5076 (EE.UU.)
1-508-766-1000 (INTL) *Es posible que se apliquen cargos por la llamada. Tenga a mano el número de serie cuando realice la llamada.*

Los propietarios que vivan fuera de los Estados Unidos deben revisar la Guía del usuario o ir a Global.Bose.com para encontrar la dirección más cercana.

GARANTÍA LIMITADA

A quién cubre:
Esta garantía se extiende únicamente al comprador final original o a la persona que reciba el producto como regalo y no se extenderá a cualquier otra persona o beneficiario.

Qué se cubre/Por cuánto tiempo:
A menos que un período de garantía diferente se explicite en la Guía del usuario provista con su producto Bose®, por un período de 1 año (2 años en la UE.) [5 años para altavoces no eléctricos incorporados en el producto] a partir de la fecha de la compra minorista por parte del usuario final original, Bose garantiza que este producto, cuando se le entrega en su paquete original y en nueva condición, por parte de un revendedor autorizado por Bose y es utilizado en condiciones normales, no tiene defectos de fabricación, de materiales ni de producción.

Qué es lo que no se cubre:
Esta garantía no cubre defectos ocasionados por prácticas de uso o mantenimiento incorrectas o no razonables, el incumplimiento de las instrucciones de uso; accidentes; humedad excesiva; insectos; rayos; subidas de tensión; conexión a voltaje incorrecto; alteraciones o modificaciones no autorizadas del producto original; daños causados por embalaje o proceso de envío inapropiado; pérdida, daño o alteración de la información guardada; daños ocasionados por el uso con productos que no sean de Bose; productos que requieren de modificación o adaptación para permitir que se utilicen en cualquier país fuera del país para el que fueron diseñados, fabricados, aprobados y/o autorizados, o reparación de productos dañados por estas modificaciones; y productos adquiridos de vendedores no autorizados.

Qué haremos:
Durante el período de garantía repararemos o sustituiremos, a nuestra discreción, las partes defectuosas en un período razonable de tiempo y sin cargo utilizando repuestos nuevos o rehabilitada.

Qué es lo que no haremos:
Pagar cargos por envío, seguros o transporte del producto de usted a nosotros, tasas de importación o impuestos.

Qué debe hacer para obtener el servicio de la Garantía limitada:
Devuelva el producto con el comprobante de compra emitido por un vendedor autorizado de Bose, realizando los siguientes pasos:

1. Contáctese con la compañía Bose en su país/región (visite Global.Bose.com para obtener información de contacto en su país/región) a fin de obtener instrucciones específicas sobre devolución y envío;
2. Rotule y envíe el producto, con flete pago, a la dirección de la compañía Bose en su país; y
3. Coloque cualquier número de autorización para la devolución que sea necesario en forma visible y en la parte exterior del paquete. Los paquetes que no tengan un número de autorización de devolución, cuando sea necesario, serán rechazados.

Otras condiciones:
LAS DISPOSICIONES DE ESTA GARANTÍA LIMITADA REEMPLAZAN CUALQUIER OTRA GARANTÍA, YA SEA EXPRESA O IMPLÍCITA, ESCRITA U ORAL, INCLUYENDO CUALQUIER GARANTÍA DE COMERCIABILIDAD O ADECUACIÓN A UN FIN PARTICULAR. LA RESPONSABILIDAD MÁXIMA DE BOSE CORPORATION NO PUEDE EXCEDER EL PRECIO DE COMPRA REAL QUE USTED PAGÓ POR EL PRODUCTO. BAJO NINGUNA CIRCUNSTANCIA SERÁ BOSE RESPONSABLE POR LA PÉRDIDA, DAÑO O ALTERACIÓN DE INFORMACIÓN GUARDADA O POR DAÑOS ESPECIALES, INCIDENTALES, EN CONSECUENCIA O INDIRECTOS CUALQUIERA SEA LA CAUSA DE LOS MISMOS, INCLUYENDO SIN LIMITACIÓN, EL REEMPLAZO DE EQUIPOS Y PROPIEDADES Y CUALQUIER COSTO DE RECUPERACIÓN, PROGRAMACIÓN O REPRODUCCIÓN DE CUALQUIER PROGRAMA O INFORMACIÓN GUARDADA O UTILIZADA CON SU PRODUCTO BOSE. Esta garantía se anula en caso de que la etiqueta con el número de serie haya sido quitada o dañada.

Otros derechos legales:
Esta garantía limitada le otorga derechos legales específicos y es posible que también se le otorguen otros derechos que varían según los estados o países. Algunos lugares no permiten limitaciones en garantías implícitas o la exclusión o limitación por daños secundarios o resultantes, por lo que es posible que las limitaciones o exclusiones anteriores no se apliquen a usted.

**En caso de que no registre su producto no se verán afectados sus derechos de garantía limitada.*

Enregistrez votre produit.* Renseignez-vous sur la gamme complète de services offerts dans le cadre de notre garantie.

L'enregistrement en ligne est simple et rapide. Global.Bose.com/register

Liens directs vers les sites d'enregistrement :

www.register.Bose.eu *(Europe)*
www.Bose.com/register *(États-Unis, Puerto Rico et Îles Vierges des États-Unis)*
www.Bose.com.au/warranty *(Australie)*
www.Bose.ca/register *(Canada)*
www.Bose.co.nz/warranty *(Nouvelle-Zélande)*

Pour toute correspondance relevant d'une demande de renseignements au sujet de nos produits ou de nos services de garantie limitée, veuillez nous écrire à notre siège social, à l'adresse suivante :

Enregistrement de produits
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 États-Unis

1-800-736-5076 (États-Unis)
1-508-766-1000 (international) *Des frais peuvent s'appliquer. Veuillez avoir en main votre numéro de série lors de l'appel.*

Si vous résidez hors des États-Unis, consultez le guide de l'utilisateur ou le Global.Bose.com pour obtenir l'adresse postale la plus proche.

GARANTIE LIMITÉE

Bénéficiaire :
La présente garantie est uniquement valable pour le premier acheteur ou la personne ayant reçu le produit en cadeau et ne peut en aucun cas être étendue ou transférée à une autre personne.

Objet et durée de la garantie :
À moins qu'une durée différente ne soit indiquée dans le guide de l'utilisateur fourni avec le produit, Bose® garantit pendant une période d'un an (deux ans dans l'UE) [cinq ans pour tout haut-parleur non amplifié intégré au produit], à partir de la date d'achat au détail par le premier acheteur, que le produit est libre de tout vice de matériaux et de fabrication lorsqu'il est livré à l'état neuf, dans son emballage d'origine et par un détaillant autorisé Bose, et qu'il est utilisé dans des conditions normales.

Exclusions :
La présente garantie ne couvre pas : les défauts ou dommages résultant d'une utilisation ou d'un entretien inapproprié ou incorrect, du non-respect des directives d'utilisation, d'un accident, d'une humidité excessive, de la présence d'insectes, de la foudre, d'une pointe de courant électrique, d'un raccordement à un courant électrique d'une tension incorrecte, d'une altération ou d'une modification du produit, de procédures d'emballage ou d'expédition inappropriées; la perte, l'altération ou la détérioration de données informatiques; les dommages causés par l'utilisation avec un produit d'une marque autre que Bose; les modifications ou adaptations effectuées au produit pour qu'il soit utilisable dans un pays autre que celui pour lequel il a été conçu, fabriqué, approuvé et/ou autorisé, de même que la réparation d'un produit endommagé par ces modifications; les produits achetés auprès d'un détaillant non agréé.

Notre engagement :
Au cours de la période de garantie, à notre seule discrétion, nous réparerons ou remplacerons toute pièce défectueuse dans un délai raisonnable, sans frais utilisant nouvel ou rénové les parties de remplacement.

Frais exclus :
La garantie ne couvre pas le paiement des frais d'expédition, d'assurance et de transport du produit vers notre adresse, ainsi que de toutes taxes et de tous droits d'importation ou autres.

Conditions de l'obtention des services de garantie limitée réparation :
Expédiez-nous le produit, accompagné de la preuve d'achat d'origine d'un détaillant Bose autorisé, en suivant les directives ci-dessous :

1. Communiquez avec l'entité Bose de votre pays ou région (consultez le site Global.Bose.com pour connaître les coordonnées de Bose dans votre pays ou région) pour obtenir les instructions de retour et d'expédition particulières;
2. Étiquetez et expédiez le produit, en port payé, à l'adresse fournie par l'entité Bose de votre pays ou région; et
3. Inscrivez de façon très visible sur l'extérieur de l'emballage tout numéro d'autorisation de retour nécessaire. Un envoi qui ne comporte pas de numéro d'autorisation de retour lorsque celui-ci est requis sera refusé.

Autres conditions :
LES CONDITIONS DE LA PRÉSNTE GARANTIE LIMITÉE REMPLACENT TOUTE AUTRE GARANTIE, EXPRESSE OU IMPLICITE, EXPRIMÉE PAR ÉCRIT OU ORALEMENT, Y COMPRIS TOUTE GARANTIE DE QUALITÉ MARCHANDE OU D'ADAPTATION À UN USAGE PARTICULIER. LA RESPONSABILITÉ MAXIMALE DE BOSE CORPORATION ÉQUIVAUT AU PRIX PAYÉ PAR LE CONSOMMATEUR À L'ACHAT DU PRODUIT. BOSE NE PEUT EN AUCUN CAS ÊTRE TENUE RESPONSABLE DE LA PERTE, DE L'ALTÉRATION OU DE LA DÉTÉRIOATION DE DONNÉES INFORMATIQUES, NI DE DOMMAGES PARTICULIERS, ACCESSOIRES OU INDIRECTS, QUELLE QU'EN SOIT LA CAUSE, Y COMPRIS, SANS RESTRICTION, LE REMPLACEMENT D'ÉQUIPEMENT ET DE BIENS ET TOUS FRAIS DE RÉCUPÉRATION, DE PROGRAMMATION OU DE REPRODUCTION DE TOUT PROGRAMME OU DE TOUTES DONNÉES ENREGISTRÉS DANS LE PRODUIT BOSE OU UTILISÉS AVEC CELUI-CI. La présente garantie est annulée si l'étiquette portant le numéro de série est retirée ou altérée.

Autres droits :
La présente garantie limitée vous confère des droits particuliers selon la loi; vous pouvez aussi bénéficier d'autres droits qui varient selon votre pays ou région de résidence. Certains territoires ne permettant pas la limitation des garanties implicites ou l'exclusion ou la limitation des dommages indirects ou accessoires, il est donc possible que les limites ou exclusions ci-dessus ne s'appliquent pas à vous.

**Le non-enregistrement du produit n'affecte aucunement vos droits en vertu de la garantie limitée.*

Register your product.* Learn about the full range of services your warranty provides.

Registering online is quick and easy!
Global.Bose.com/register

To link directly to registration:

www.register.Bose.eu *(Europe)*
www.Bose.com/register *(US, PR & USVI)*
www.Bose.com.au/warranty *(Australia)*
www.Bose.ca/register *(Canada)*
www.Bose.co.nz/warranty *(New Zealand)*

Send any correspondence regarding product information or Limited Warranty services to our corporate headquarters at:

Product Registration
Bose Corporation
The Mountain
PO Box 9168
Framingham, MA 01701-9168 USA

1-800-736-5076 (US)
1-508-766-1000 (INTL) *Charges may apply.*
Please have your serial number available when you call.

Owners living outside the United States should check the Owner's Guide or Global.Bose.com for the nearest mailing address.

LIMITED WARRANTY

Who is covered:
This warranty is extended only to the original end-use purchaser or the person receiving the product as a gift, and shall not be extended to any other person or transferee.

What is covered/For how long:
Unless a different warranty period is stated in the Owner's Guide provided with your Bose® product, for a period of 1 year (2 years EU) [5 years for any non-powered speakers that may be incorporated into this product] from the date of retail purchase by the original end-use purchaser, Bose warrants that this product, when delivered to you in new condition, in original packaging, from a Bose authorized reseller and used in normal conditions, is free from any defects in manufacturing, materials and workmanship.

What is not covered:
This warranty does not cover defects resulting from improper or unreasonable use or maintenance; failure to follow operating instructions; accident; excess moisture; insects; lightning; power surges; connections to improper voltage supply; unauthorized alteration or modification of original condition; damages caused by inadequate packing or shipping procedures; loss of, damage to or corruption of stored data; damages caused by use with non-Bose products; product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications; and products purchased from unauthorized dealers.

What we will do:
During the warranty period, we will, at our sole option, repair or replace (using new or refurbished replacement parts) any defective parts within a reasonable period of time and free of charge.

What we will not do:
Pay shipping, insurance or transportation charges from you to us, or any import fees, duties and taxes.

What you must do to obtain Limited Warranty Service:
Return product, with proof of purchase from an authorized Bose dealer, using the following procedures:

1. Contact the Bose organization in your country/region (visit Global.Bose.com for Bose contact information in your country/region) for specific return and shipping instructions;
2. Label and ship the product, freight prepaid, to the address provided by the Bose organization in your country; and
3. Place any necessary return authorization number prominently on the outside of the carton. Cartons not bearing a return authorization number, where required, will be refused.

Other conditions:
THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESSED OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSE CORPORATION'S MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT. IN NO EVENT SHALL BOSE BE LIABLE FOR LOSS OF, DAMAGE TO OR CORRUPTION OF STORED DATA, OR FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT DAMAGES HOWSOEVER CAUSED INCLUDING WITHOUT LIMITATION THE REPLACEMENT OF EQUIPMENT AND PROPERTY, AND ANY COSTS OF RECOVERING, PROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH YOUR BOSE PRODUCT. This warranty is void if the label bearing the serial number has been removed or defaced.

Other legal rights:
This limited warranty gives you specific legal rights, and you also may have other rights that vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

**Failure to register your product will not affect your limited warranty rights.*